



www.bihuitools.com

SCVU8

Usage Instructions



Vacuum Suction Cup

TEXTURE



Read before use



1. Safety Warnings

⚠ Caution

Read all safety instructions and warnings provided. Failure to follow the instructions below may result in serious injury.

Keep all warnings and instructions for future reference.

Safety warnings from the manufacturer

- Ensure surface of to be lifted material is dry and clean.
- Check vacuum cups for damage or perishing or glazing.
- NEVER use the lifter to support a person.
- NEVER use the lifter when the red line on the plunger is visible.
- NEVER attach ropes or chains directly to handle. Lifter is for hand lifting tasks only.
- NEVER touch the thumb release plate during lifting.
- NEVER interfere with free movement of the plunger during lifting
- Use within range: -12 to 49 °C (10 to 120 F)
- Use below 1524 metre (5000 feet) elevation.

If there is any question about a condition being safe or unsafe. DO NOT use the product.

2. Application

- For carry large porcelain or stone tiles and glass, even for rough surfaces

3. Using Instruction

- Press black plunger into handle by palm thoroughly, using ENOUGH pressure for sealing rings to come in full contact.
- Start to use the pump until plunger stays in-well beyond the red indicator line* or the pressure monitor clock shows within the green area.
- * **The red indicator line or monitor clock in red area during lift indicates gradual loss of vacuum suction and need to re-pumping.**
- To release, apply pressure to the thumb release plate toward the handle until the lifter releases suction then remove it away from the material.

4. Cleaning and Maintenance

- To remove glaze from rubber pad, scrub with cloth soaked in soapy water. Keep it down to prevent liquid getting inside.
- If pump leaks, remove plunger and wipe surrounding surfaces and handle interior with soft, lint free cloth.
- Re-coat rubber cup with SILICONE GREASE (rubber grease) ONLY. NEVER use oil based lubricants.
- NEVER use solvent to clean lifer.
- NEVER lay face down on rough/contaminated surface.
- Store in carry case. Ensure lifter well-placed.

5. Regular Inspection

Periodically test for:

- excessive leakage, sluggish pump action, increase in pumping required for full evacuation.
- Examine handle and plunger for cracks.
- Examine rubber pad for: excessive glaze, powder, dirt, oil, cuts, damage/perishing, roughness.

6. Warranty

- The guarantee covers all manufacturing or assembly defects in accordance with the legislation in force. The guarantee does not cover malfunctions caused by improper use, overloads, failure to follow the operating instructions and normal wear and tear.
- For more details and information, consult the general guarantee conditions at **www.bihuitools.com**